




**ISTRUZIONI DI MONTAGGIO RUBINETTI INCASSO LS/PU/BA**  
**INSTRUCTIONS DE MONTAGE POUR ROBINET A ENCASTRER LS/PU/BA**  
**ASSEMBLING INSTRUCTIONS FOR CONCEALED TAPS LS/PU/BA**  
**INSTRUCCIONES DE MONTAJE PARA GRIFOS ENCAJE LS/PU/BA**  
**MONTAGEANWEISUNG FUER UNTERPUTZVENTILE FUER LS/PU/BA**  
**MONTAGE VOORSCHRIFT VOOR INBOUW KRANEN LS/PU/BA**

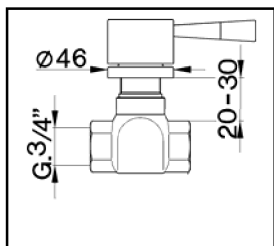


**PU 00030 3**

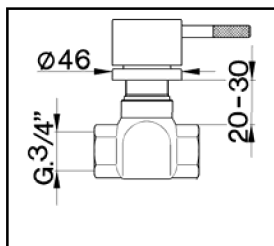


**LS 00030 3**

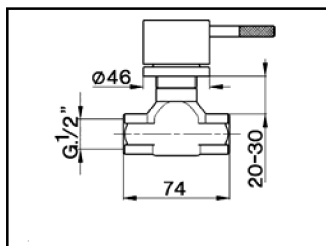


**LS 00031 0**

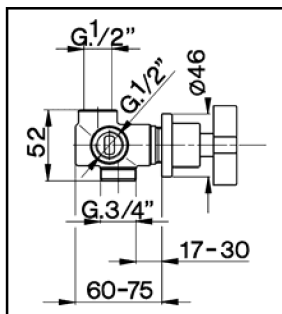


**BA 00020 0**

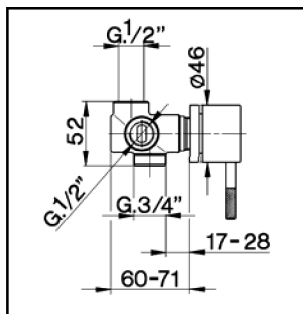


**LS 00020 0**

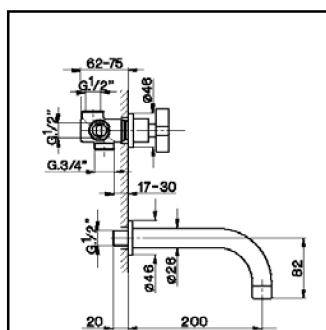

**BA 00021 0**

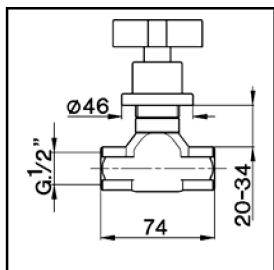

**BA 00031 0**

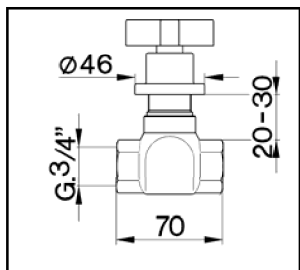

**LS 00030 3**

